

Operating instructions

Inflexion IF81 & IF91 Executive Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair is adjusted by lifting the front of three levers located below the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.



Back Recline Adjustment. The back angle is independently adjusted by lifting the rear of the three levers located below the seat on the right-hand side. It can be locked at the required angle by pushing the lever down or left unlocked to follow the user's movements.



Seat & Back Angle Adjustment. The combined seat and back angle can be adjusted by lifting the middle of the three levers located below the seat on the right-hand side. The chair can be locked at the required angle by pushing the lever down or it can be left unlocked to follow your movements. The tension of the recline can be adjusted by turning the knob located under the front of the seat.



Back Height Adjustment. The back height is adjusted by lifting the back up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.



Inflatable Lumbar Support. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.



Seat Depth Adjustment. If the chair is fitted with an optional seat slider the seat depth is adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and release the lever to lock in desired position.

Operating instructions

Inflexion IF81 & IF91 Executive Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Arm Height Adjustment. The height adjustable arms have a lever located underneath the inside edge of the arm pad. Press this in, set the arm at the desired height and release the lever to lock.



Sliding Arm Pad. The optional sliding arm pad can be unlocked by depressing the button located on the edge of the pad.



Folding Adjustable Arms. If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.