 


Operating instructions

Sensit Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Chair Height Adjustment. The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower, simply lift the lever.



Synchronised Recline Adjustment. The unique characteristic of the Sensit Synchronized mechanism is its automatic tension adjustment to accommodate different user weights. This makes Sensit ideally suited for use in free float (unlocked) mode, encouraging regular movement and the associated health benefits this can bring.

The back angle can be locked in any of 3 positions or left unlocked to follow your movements. The synchronised recline of the seat and back is locked and unlocked by lifting the lever located below the middle of the seat on the left-hand side. Please be aware that there is a safety feature that requires you to lean gently into the chair back before the lock will release.



Seat Depth Adjustment. If the chair is fitted with a seat slider, the seat depth can be adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and backwards until the required position is achieved and release the lever to lock the seat in place.



Back Height Adjustment. The back height is adjusted by pressing the button located in the back-support bar whilst lifting the back up or down for correct positioning of the lumbar curve. Release the button to lock the back at the desired height.



Arm Height and Width Adjustment. The arms have a button located on the outside face of the upright support. Press this in, set the arm at the desired height and release the button to lock. The arms adjust for width by unlocking the paddle at the base of each arm, sliding the arm outwards and then lifting the paddle to lock in position.

Operating instructions

Sensit Task Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED



Folding Adjustable Arms. If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.



Inflatable Lumbar Support. The inflatable lumbar support is adjusted using the hand bulb hanging under the right-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.



Inflatable Seat Cell Adjustment. The Sensit Task chair's unique seat construction incorporates 2 air cells with an Air Bridge to allow controlled, side to side air flow for constant support and to encourage frequent posture change and the health benefits this can bring. Located just below the back, right hand corner of the seat is a push button air valve. Press this button with your weight off the chair and the air cells will self-inflate. Press the button whilst seated and the cells will deflate. Adjust the volume of air to suit personal preference.