


# Operating instructions

## Tiverton T550 and T990 Chairs

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED

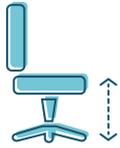


**Chair Height Adjustment.** The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.



**Back Recline Adjustment.** The back angle is adjusted by lifting lever located below the back of the seat on the right-hand side. It can be locked at the required angle by pushing the lever down or left unlocked to follow the user's movements.



**Inflatable Lumbar Support.** The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.

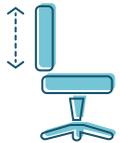


**Back Height Adjustment.** The back height can be adjusted by lifting the back up a step at a time until the correct positioning of the lumbar support is achieved. When the back reaches the top of its travel it will drop back to the start position.



**Height Adjustable Arms.** The arms have a button located on the outside face of the upright support. Press this in, set the arm at the desired height and release the button to lock.



 **Folding Adjustable Arms.** If the chair is fitted with optional folding adjustable arms these have a button located half way down the outside of the post to adjust the height and a second button at the bottom to allow the arm to be rotated backwards, out of the way.



**Seat Depth Adjustment.** If the chair is fitted with the optional seat slide the seat depth is adjusted by lifting the lever located below the middle of the seat on the left-hand side. Slide the seat forwards and release the lever to lock in desired position.